



## MyFire™ Assembly Steps

### STEP 1


Lay out the five interlocking panels as shown on the picture: Back panel to the rear, side panels to each side and base panel and grate at the front.



### STEP 2

Slide the “T” lugs of the back panel, into the rear arrow-head slots, of each side panel.

Ensure the “T” lugs drop all the way down, before tilting backwards, to lock it into place.

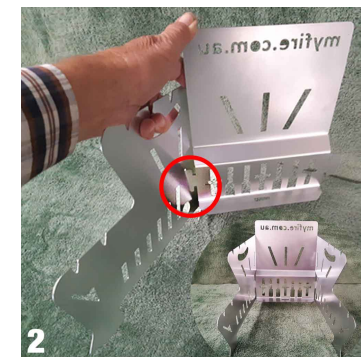

### STEP 3

Similarly insert the “C” lugs of the base panel into the other (front) arrow-head slots. Ensure they also drop down all the way.

Then tilt the panel to the rear until it comes to rest on the back panel’s lower flange and the tab interlocks with the slot.



### STEP 4


Slide the grate panel into the Rear panel slots. Gently lay it to rest. It locks easily with the front of the base panel.



### STEP 5

Use the side panel hand-holds, to place the camp fire into the holding tray.

(We recommend to use both handles when lifting MyFire before use and once cold again – see operating and cleaning/safety guidelines)

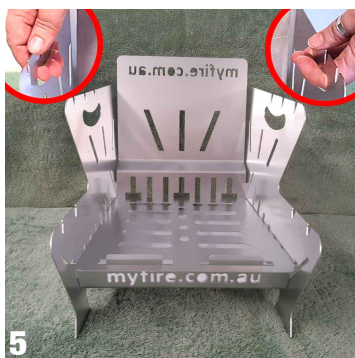

### STEP 6

Some users have chosen to further secure the assembled unit.

It is easy: Insert Lynch pins into the tabs of both the base plate and the grate.

See the example shown on the picture.

